

TC-96214-IP
 Rev A, May 2017
 www.commscope.com

Vertical Cable Guide Accessory Kit (VERT-CBL-BKT) (for SYSTIMAX® UD and HD, and Uniprise® SD)


NOTE: This kit is NOT required when a rack-mounted Vertical Cable Manager is used (see top left photo).



Kit Contents (860635851)

- 12-24, 3/4" FASTENER (Qty 2)
- M6x1, 20mm FASTENER (Qty 2)
- VERTICAL CABLE GUIDE (Qty 2)

(2.) Mount the Vertical Cable Guide Accessory Kit in the orientation shown below using the screw provided in the kit. See back page for mounting positions.

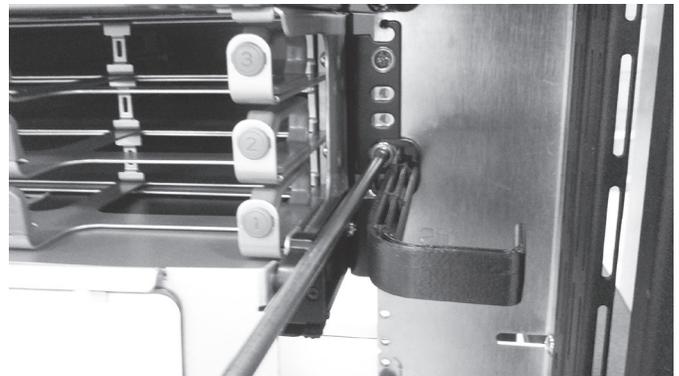

(3.) Connect Fiber Patch cords to module and run the cables out of chassis and over the accessory kit Vertical Cable Guide. Do this for both sides of the chassis.




(4.) Refer to the illustration on the back page for views of the kit exploded from the panel models.

Procedure





If a Vertical Cable Manager is NOT used, follow this procedure to install the Vertical Cable Guide Accessory Kit.

(1) Locate the mounting position for the kit on the existing shelf. The kit will be mounted near the lower portion of the panel on top of the existing shelf mounting bracket (see photo below).

NOTE: See back page for exploded views of the kit with different models.

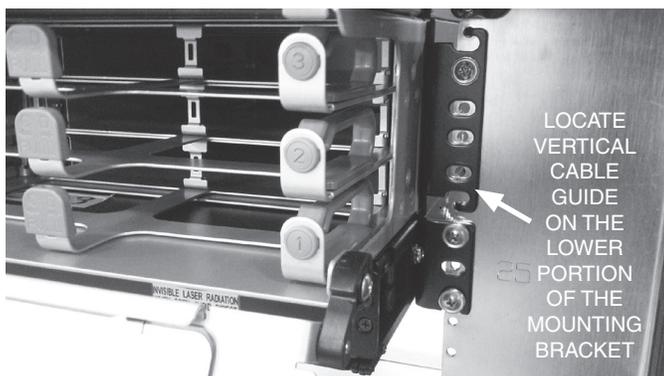

The views below show how the Vertical Cable Guide Accessory Kit is oriented to different panel models. Please note chassis doors are removed in some views and the exact model may not be pictured.

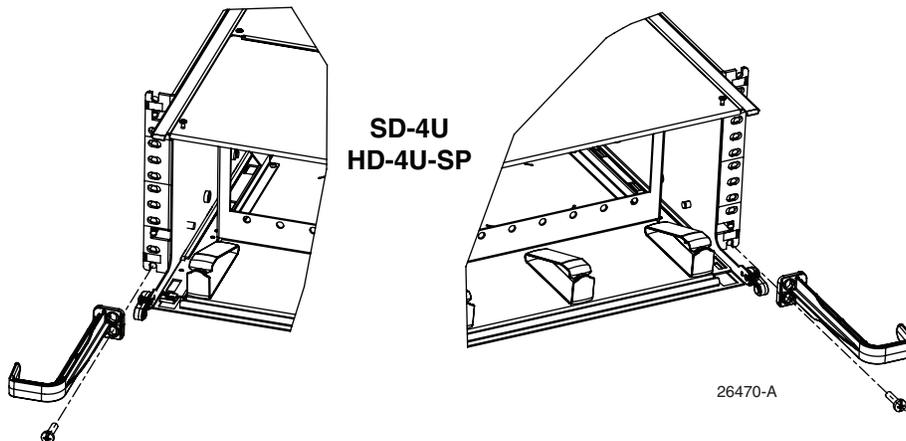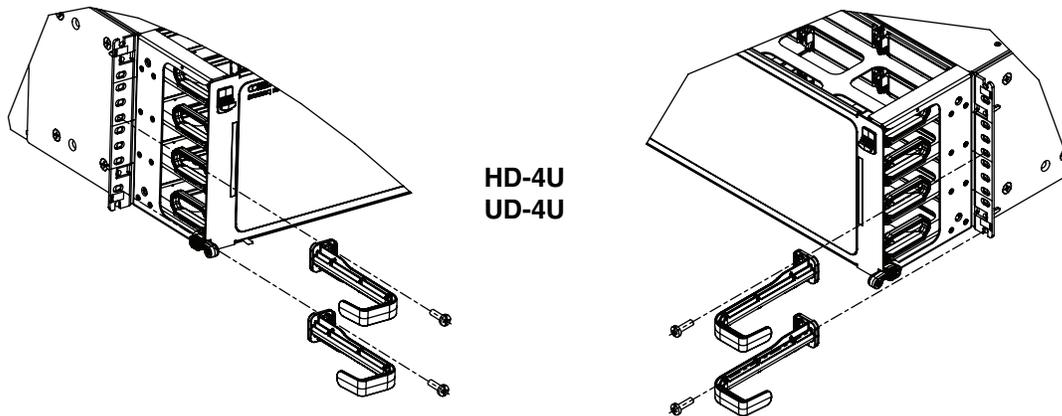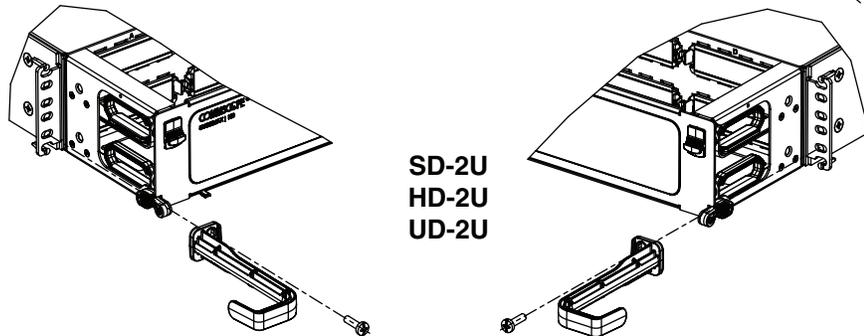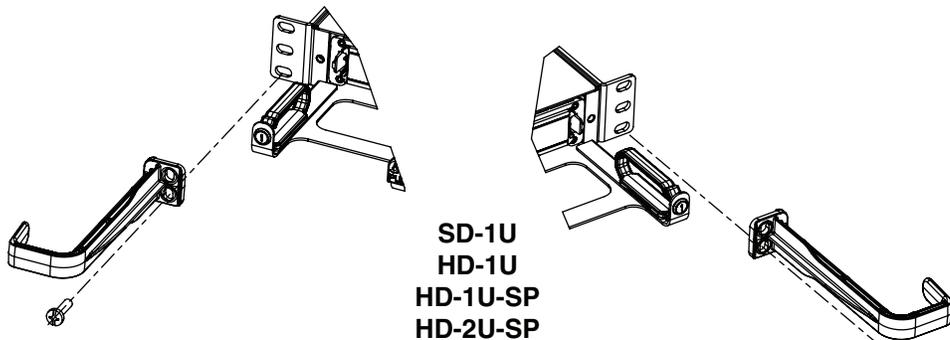

26470-A



For product support, visit our website at <http://www.commscope.com/SupportCenter>

For information on product patents, go to <http://www.commscope.com/ProductPatent/ProductPatent.aspx>