
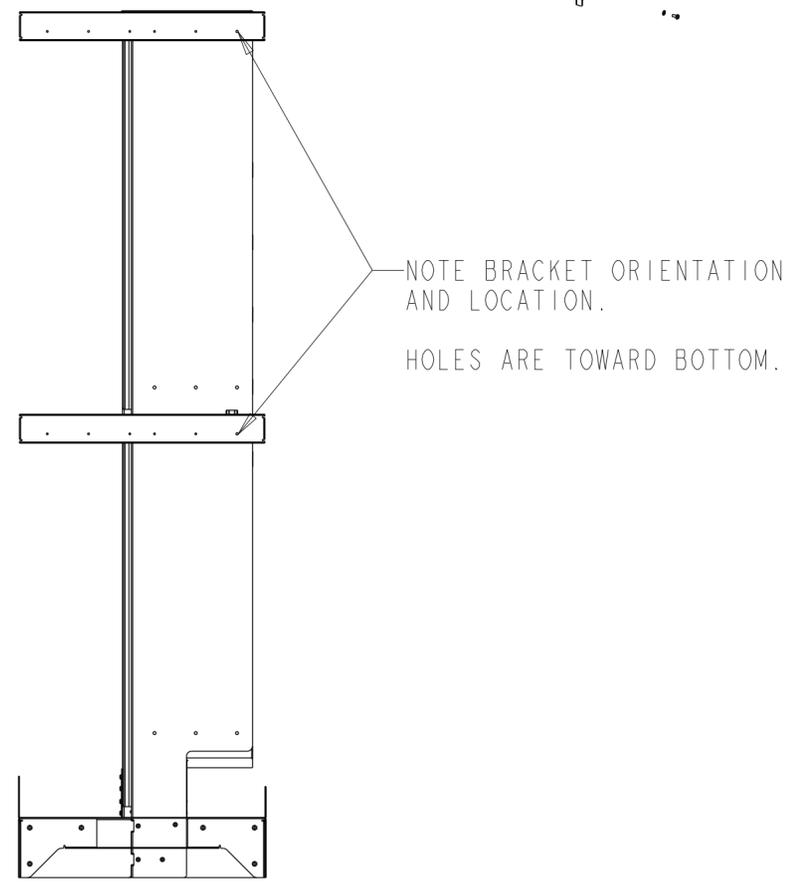
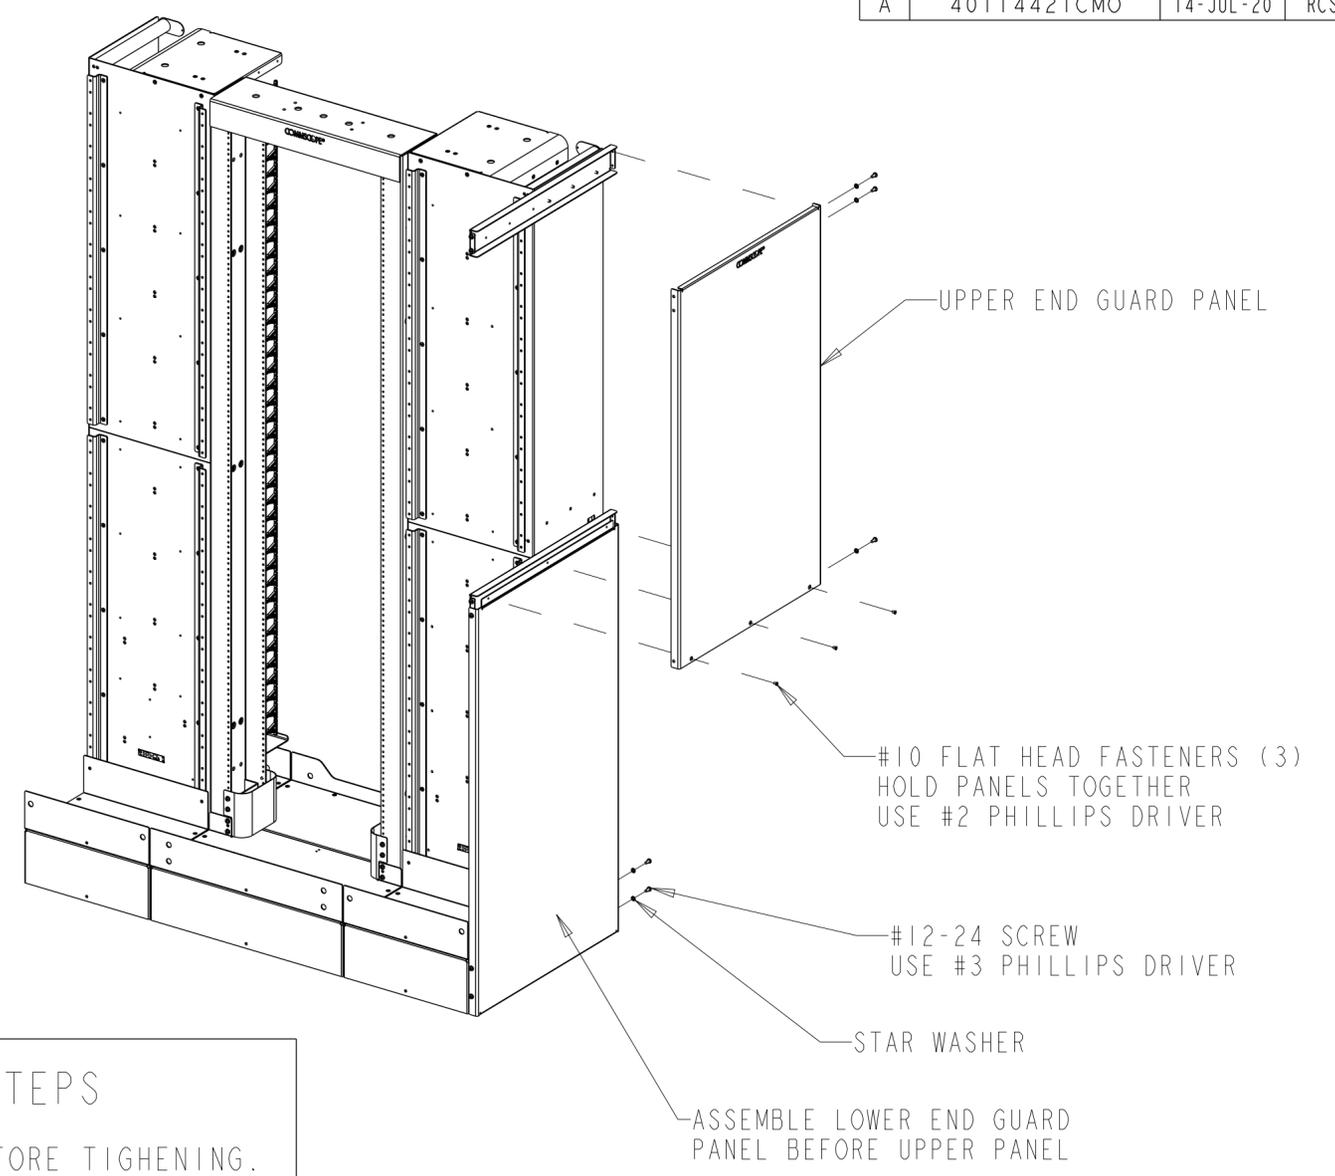


END GUARD INSTALLATION

REVISIONS			
REV	CMO	DATE	APPROVED
A	40114421CMO	14-JUL-20	RCS

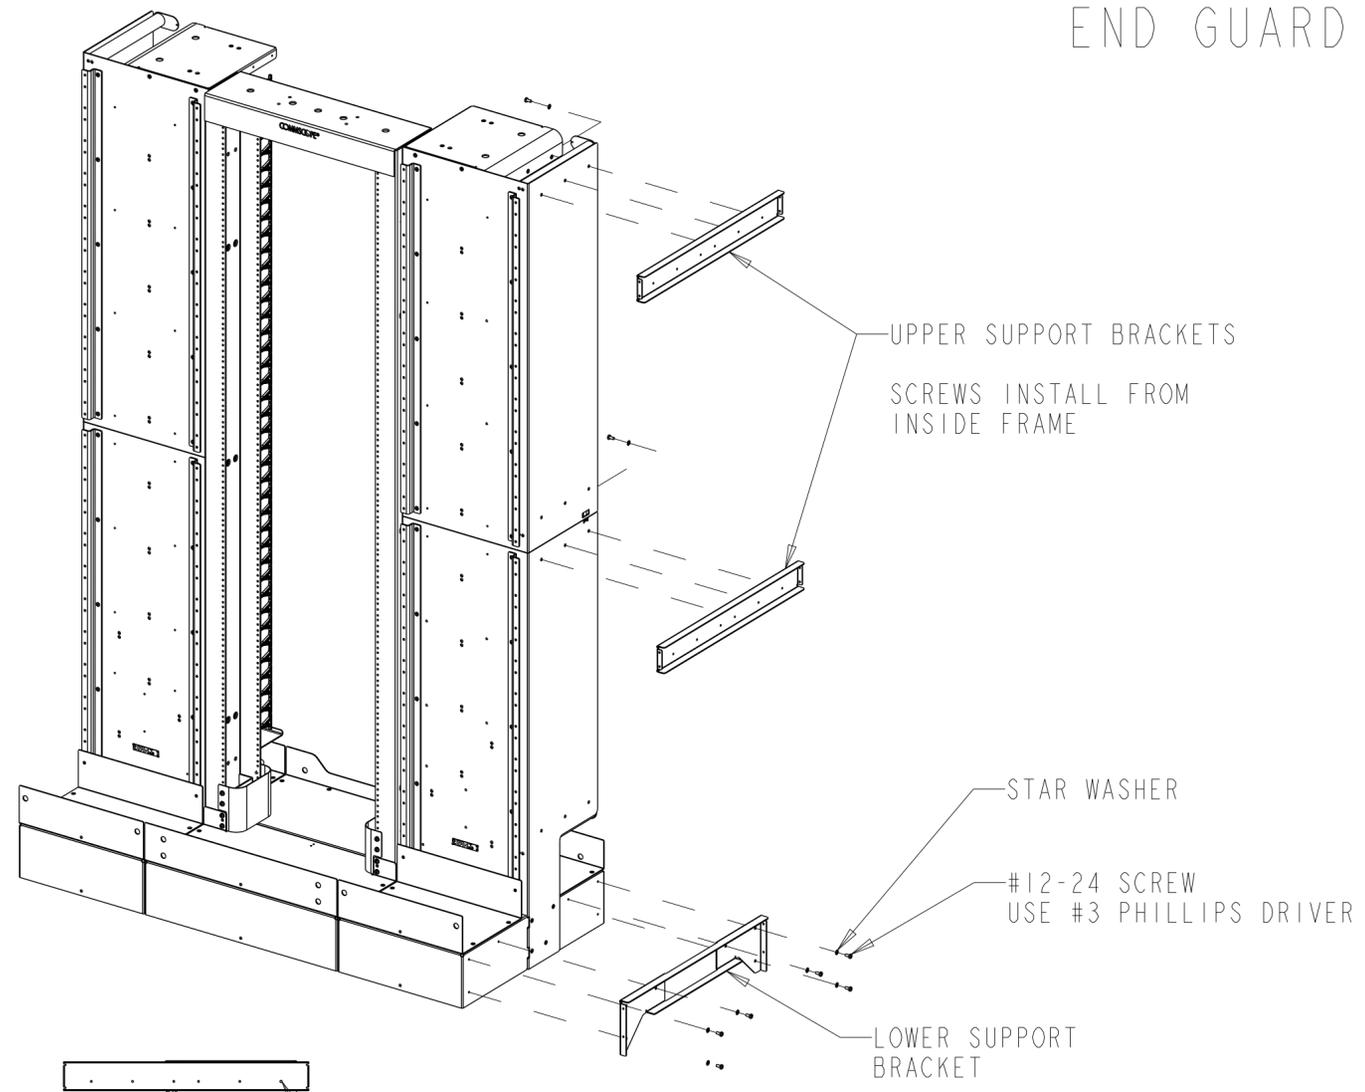

ASSEMBLY STEPS

START ALL FASTENERS BEFORE TIGHTENING.
END GUARD CAN BE INSTALLED ON EITHER SIDE OF THE FLEX FRAME.

TOOLS NEEDED:
SHORT #3 PHILLIPS SCREW DRIVER (FOR UPPER SUPPORT BRACKETS)
#2 PHILLIPS SCREW DRIVER.

1. ASSEMBLE SUPPORT BRACKETS TO FLEX FRAME. (SEE ILLUSTRATIONS FOR LOCATIONS.)
2. ASSEMBLE LOWER END GUARD PANEL.
3. ASSEMBLE UPPER END GUARD PANEL.
4. ASSEMBLE FASTENERS IN CENTER HOLES FOR FASTENING COVERS TOGETHER.
5. TAKE A BREAK AND HAVE A BEVERAGE.

660105215	A
MID	REV

COMMSCOPE, INC.										
TOLERANCES					SAP MATERIAL MASTER					
N/A										
FINISH					MATERIAL					
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETERS	DRAFTER			TITLE						
	R. SCHOENFELDER			INSTALL DRAWING, END GUARD, FLEX FRAME						
	CHECKER			SIZE		SCALE		DOCUMENT NO.		
	J. SOLHEID			A2		13/160		A20106796		
ENGINEER			CMO							
J. SOLHEID			40114421CMO							
ALL SURFACES			WORK AREA: 58		MODEL		DRAWING		SHEET	
✓			00		00		01		1 OF 1	
							RE		A	

© 2020 CommScope, Inc. Confidential
NOTICE: These drawings and specifications are the proprietary property of COMMSCOPE, INC. and may be used only for the specific purpose authorized in writing by COMMSCOPE, INC.