


FIST-GC02-BD2BE extension kit

1 Kit contents

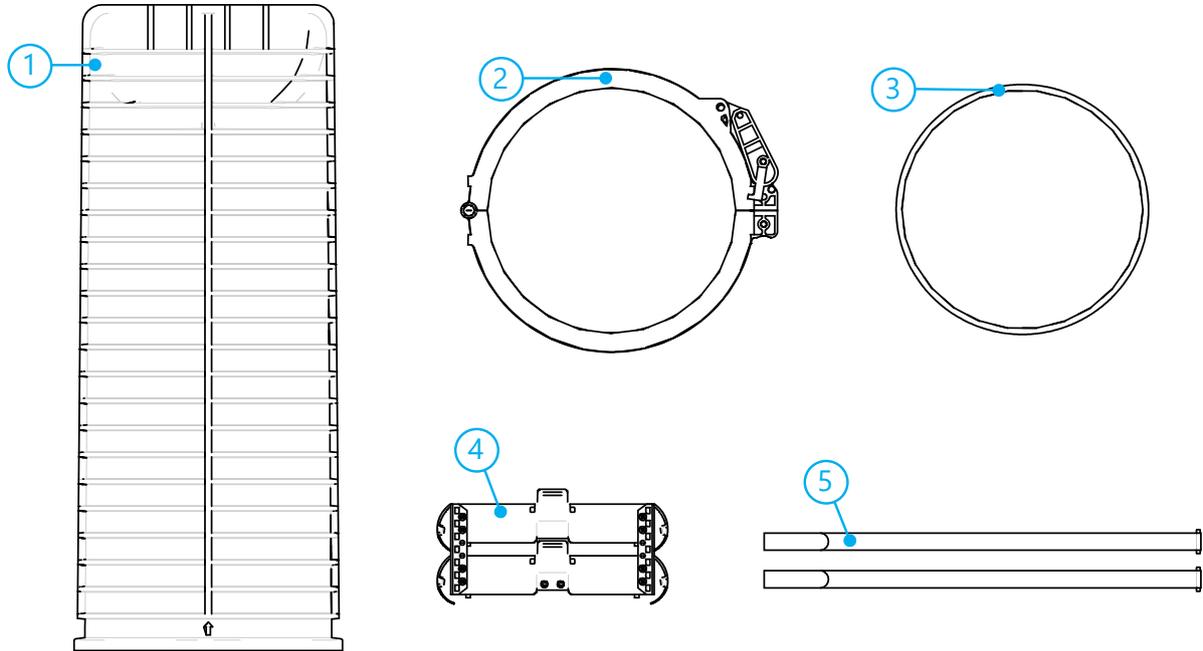


N°	Description	Qty
1	Dome BE	1
2	clamp	1
3	O-ring	1
4	UMS extension	1
5	Hook and loop fasteners	2


2 UMS units

This extension kit provides an additional 16 UMS units (2 already free on the closure +14 new) to each side.


3 Install the BD2BE UMS extension.

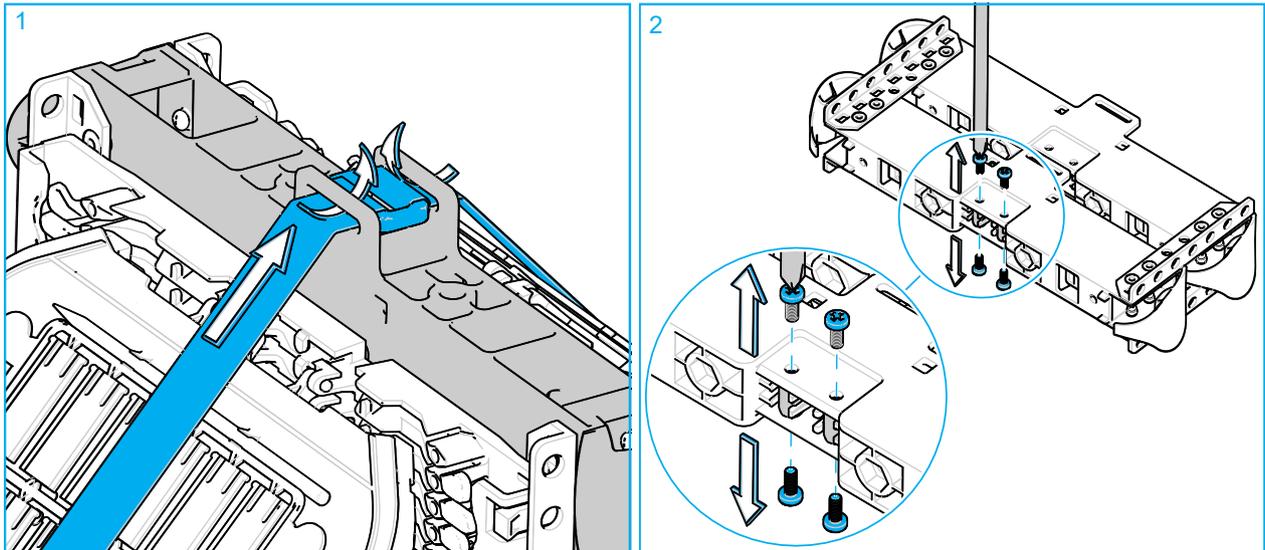

- 1 Remove the current hook and loop fasteners.
- 2 Loosen the 4 screws of the UMS extension and put these aside.

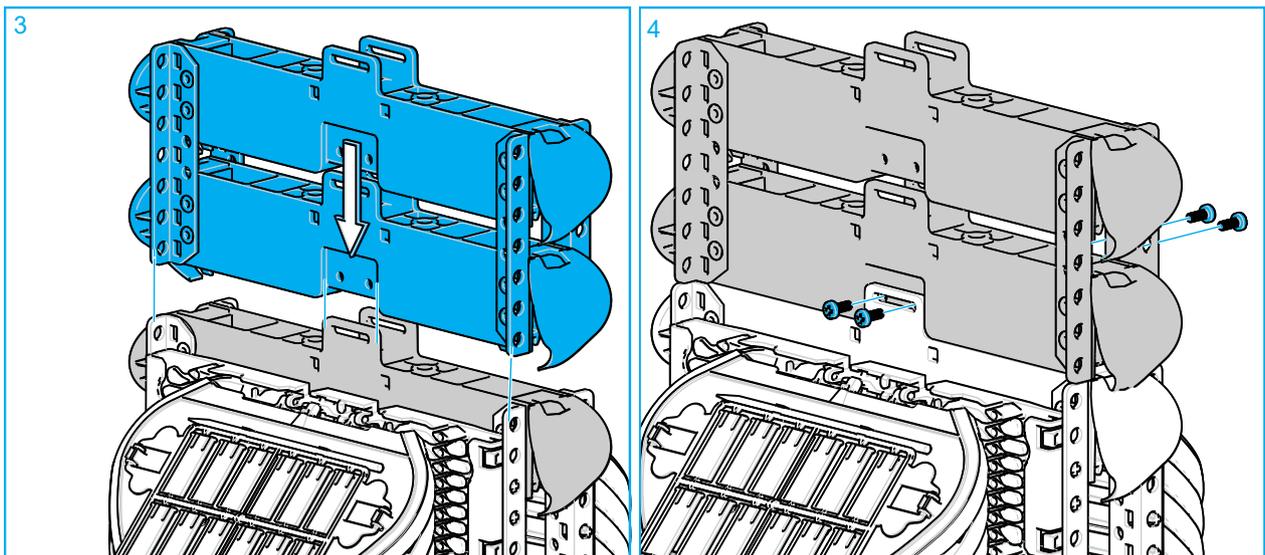

- 3 Position the UMS extension on the top bracket as shown.
- 4 Insert the 4 screws again and secure.

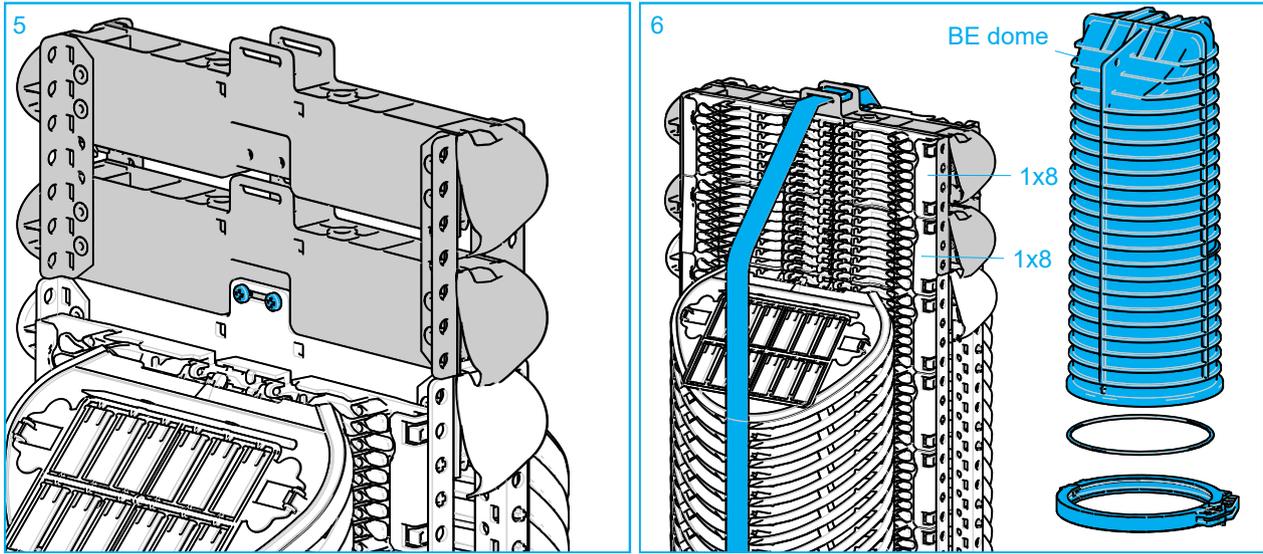

- 5 UMS extension installed.
- 6 2 1x8 grooveplates can now be added (16 UMS units) per side. These grooveplates are not a part of the kit. Install the new hook and loop fasteners, seal, dome and clamp.