


EZPT Blade Replacement IB

Installation Instructions and Checklist

Bulletin 7722823 Rev. B | Page 1 of 1


1

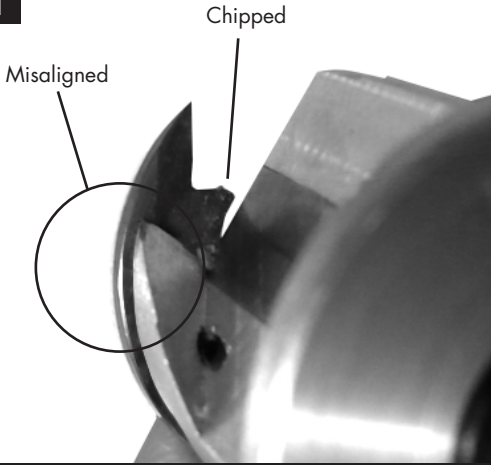

Misaligned

Chipped

Misaligned Blade

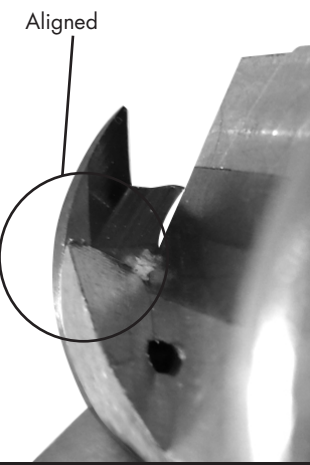


Aligned

Aligned Blade

Foam Blade Inspection

Check alignment of foam blade before replacing flat blade and jacket blade. A chipped or misaligned foam blade will still cause prep failures. In case of foam blade issues, purchase new tool.


2

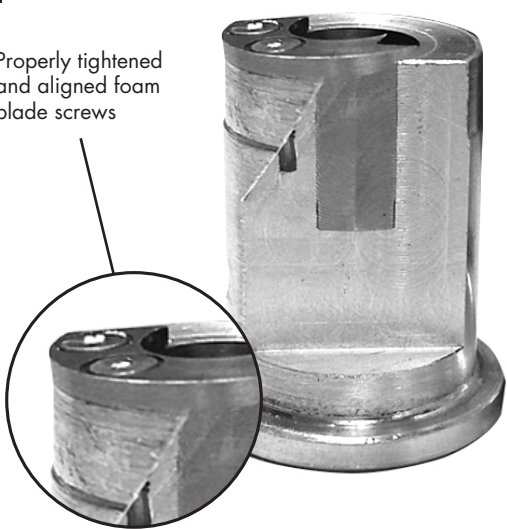

Properly tightened and aligned foam blade screws

Ensure that the screws on the Foam blade are aligned and tightened down properly. Make sure the screws don't appear to be sitting up.

3a

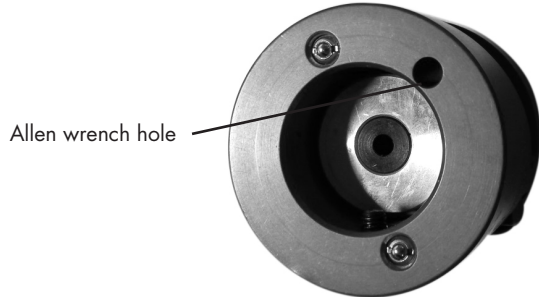


Allen wrench hole

Flat Blade Replacement

Remove the tool B body, and engage the allen wrench and the flat blade screw through the hole on the bottom of the tool. Inserting the wrench from the side might strip the screw threads.

3b



Unscrew the flat blade using a plier for leverage and replace it with the new flat blade. Repeat same to replace jacket blade.

ANDREW an Amphenol company
2601 Telecom Parkway, Richardson, Texas, 75082, USA
www.andrew.com

Technical Support
+1 888 297 6433, Option 3 (Toll Free US and Canada)
awpnarsupport@andrew.com

Notice: ANDREW disclaims any liability or responsibility for the results of improper or unsafe installation, inspection, maintenance, or removal practices.
Aviso: ANDREW no acepta ninguna obligación ni responsabilidad como resultado de prácticas incorrectas o peligrosas de instalación, inspección, mantenimiento o retiro.
Avis : ANDREW décline toute responsabilité pour les conséquences de procédures d'installation, d'inspection, d'entretien ou de retrait incorrectes ou dangereuses.
Hinweis: ANDREW lehnt jede Haftung oder Verantwortung für Schäden ab, die aufgrund unsachgemäßer Installation, Überprüfung, Wartung oder Demontage auftreten.
Atenção: A ANDREW abdica do direito de toda responsabilidade pelos resultados de práticas inadequadas e sem segurança de instalação, inspeção, manutenção ou remoção.
Avvertenza: ANDREW declina eventuali responsabilità derivanti dall'esecuzione di procedure di installazione, ispezione, manutenzione e smontaggio improprie o poco sicure.
注意: ANDREW 公司申明對於不恰當或不安全的安裝、檢驗、維修或拆卸操作所導致的後果不負任何義務和責任

